


Fitting the brackets


1

The brackets offer two methods of installation:

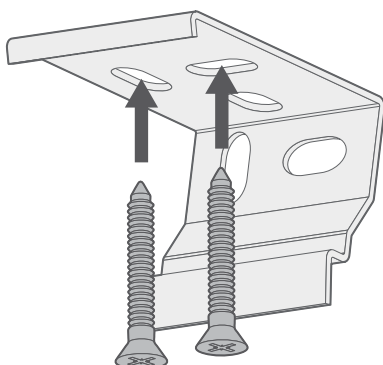

Top-Fixing

Use the **front two holes in the top of the bracket** to fix to the lintel (the 'ceiling' of the recess).

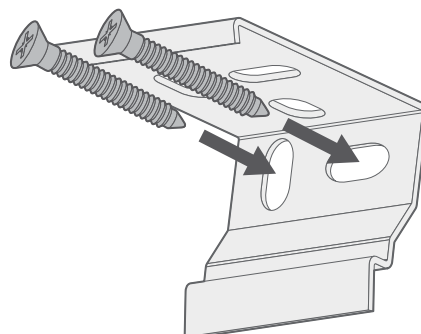


Face-Fixing

Use two screws through the back plate to mount onto a facing surface (a wall or window frame)



Note that the position of the outermost brackets should be at least 50mm away from the ends of the rail, with any other brackets evenly distributed across the width.

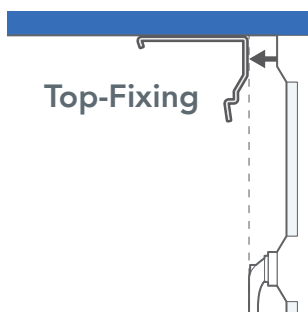


Top-Fixing

When top-fixing, ensure that the brackets are fitted at such a distance from the window frame that the back of the bracket is in front of any handles or vents on the window.


Fitting the blind

2

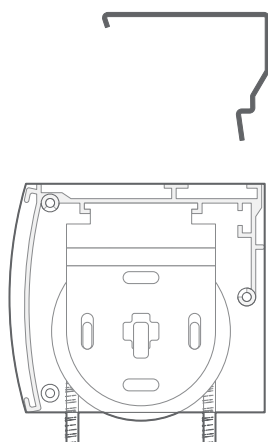


Bracket
(side-on)

Blind
(side-on)

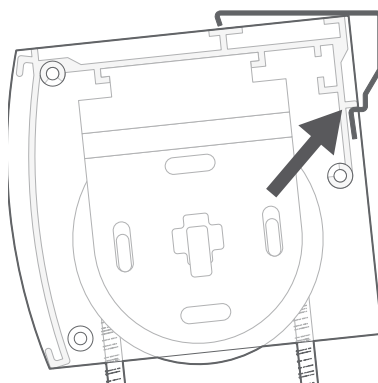

Holding the rail at an angle, situate the lip on the back of the cassette into the bottom lip of the bracket.

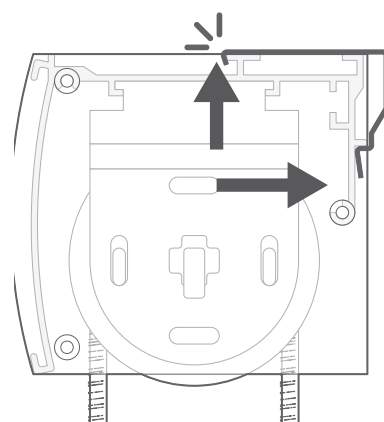

Push the headrail back against the bracket and up, until the top of the cassette clicks into the front hook of the bracket.

Child Safety



Young children have died by wrapping loose curtain and blind cords or chains around their necks.




Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat.

Move cots and furniture away from window covering cords or chains.

Do not remove this label.

WARNING: To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

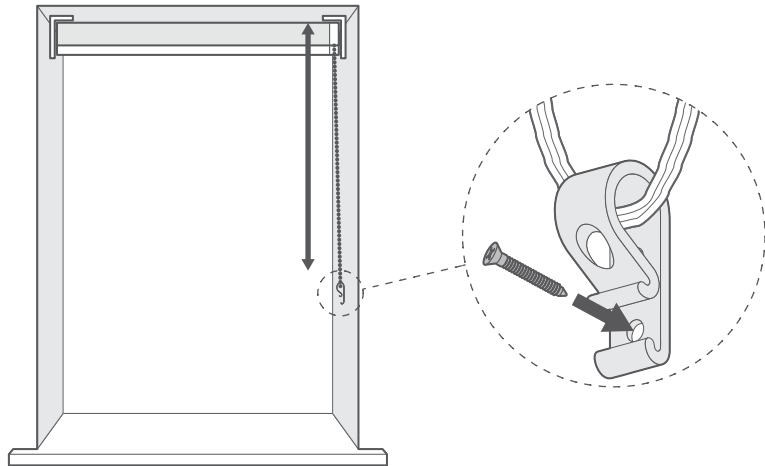

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cords from becoming slack.

Place the retaining device on the wall and mark the position of the screw hole(s) with a pencil.

Attach the retaining device to the wall using the fixings provided.